



### Melinex® Polyester Film For Durable Cards




#### Why choose Melinex® PET Film?

The combination of durability, cost effectiveness and simplicity of implementation has made Melinex® polyester film the number one choice in a wide range of National ID and other long life card applications worldwide with over 2.5 billion cards issued in the past 8 years.

|                                  | Melinex®   | PC         | PETG       | PVC          |
|----------------------------------|------------|------------|------------|--------------|
| Durability                       | <b>///</b> | <b> </b>   | <b>√</b>   | <b>√</b>     |
| Temperature Resistance           | <b>///</b> | <b>///</b> | <b>√</b>   | <b>√</b>     |
| <b>Environmental Credentials</b> | <b>///</b> | <b>√</b>   | <b>///</b> | $\checkmark$ |
| <b>Solvent Resistance</b>        | <b>///</b> | ✓          | <b>/ /</b> | <b>√</b>     |
| Ease of Use                      | <b>/ /</b> | ✓          | <b>/ /</b> | <b>///</b>   |
| Cost Effectiveness               | <b> </b>   | ✓          | <b>/ /</b> | <b>///</b>   |

#### What is Biaxially Oriented Polyester Film?

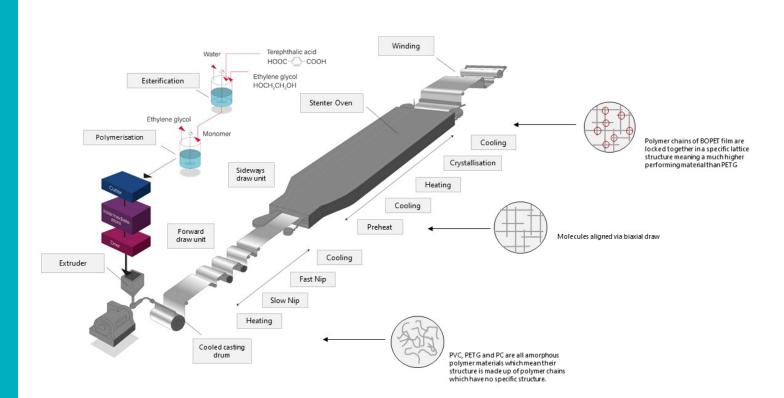



Melinex® is the brand name for our PET films and is a biaxially oriented crystalline material with polymer chains locked together in a specific lattice structure. This means it is a much higher performing material than PETG. The structure gives it enhanced durability and excellent temperature resistance.




PVC, PETG and Polycarbonate (PC) are all amorphous polymer materials which means their structure is made up of polymer chains which have no specific structure.

#### Technical Benefits of Cards made with Melinex® PET Film


#### **Flex Resistance**

#### 200 000 x 200 000 x

#### **Solvent Resistance**

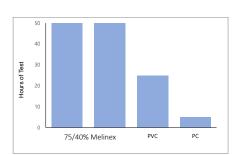

#### **Temperature Resistance**

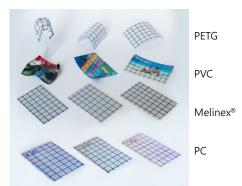

After 5 mins After 5 mins After 5 mins at 150 C at 100 C at 85 C

- The ISO Flex test uses repeated flexions of the card to simulate day to day use.
- Appearance of card is monitored throughout the test cycle to check for cracks or complete card failures.
- Cards containing Melinex®
   PETF showed no failures at end
   of test, other cards failed in
   region of implant module.
- Melinex® PETF has excellent resistance to embrittlement and premature failure caused by plasticisers found in wallets.
- Test method involves adding a small droplet of dioctyl phthalate (DOP) plasticizer to the card surface and placing it in a static stress fixture.
- Test measure hours before card fracture occurs (Test methods: INCITS322 & ISO24789-2).
- Melinex® PETF film provides excellent performance at elevated temperatures due to the crystallisation process (230°C for extended period during manufacturing)
- Melinex® PETF film offers superior thermal stability compared to both PETG and PVC.
- Melinex® PETF film is used extensively in flexible electronics applications (continuous use – 70 °C – 130 °C)

#### A Focus on Sustainability



#### PET - A Sustainable Building Block

- Low carbon footprint and water usage compared to alternative materials
- Commercially available with high quality post consumer recycled content
- Available with 30% bio derived raw materials
- Most recycled plastic globally through best in class high yield recycling processes
- Excellent performance/weight ratio minimising plastic use
- Halogen free with zero hazardous waste products



#### **Melinex® PET Film Card Applications**

#### Melinex® PET films for Driver's Licence and Clear Window Cards

# 50 μm (2 mil) PVC Overlay 250 μm (10 mil) PVC core stock 152 μm (6 mil) Melinex\* 342 (clear) 250 μm (10 mil) PVC core stock 50 μm (2 mil) PVC Overlay Indicates guilloche background printing


- Increased mechanical and thermal performance vs standard PVC cards
- Printing on PVC
- Typical applications include driver's licence, clear window ID, additional security feature
- Addition of clear Melinex® PET film provides more durable window card for ID applications vs clear PVC and/or PC
- Two side heat seal assists with lamination to PVC
- Can be incorporated into any interior layer of card for added durability

#### Laser Engravable Melinex® PET film ID Card



- Overlay allows laser personalisation
- Melinex® CORE2 gives significantly increased toughness and durability compared with PVC or PETG solutions
- Less expensive than polycarbonate solutions
- Laser Engravable PVC or PETG can be used in place of Melinex® LEO

#### **Melinex® PET films for Campus Cards**

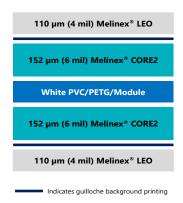

- Increased mechanical and thermal performance vs standard PVC cards
- Printing on PVC
- 40% Melinex®/60% PVC is the industry standard and preferred composition for campus cards
- Superior durability, passes laundry test, excellent temperature and solvent resistance
- Xavier Study of 9000 cards tested in a Campus environment concluded that cards using Melinex® PET film were the most durable
  - \* Tushie, David "Longer Card Expiration Requires Better Card Durability" Card Manufactuing magaxine (June 2052015; Vol 24;4 pgs 22-23)

#### **Mono Material Recyclable Structure**

100 μm Melinex® SRO (80-85% PCR)

152 μm Melinex® CORE1 (65% PCR)

PETG Module

152 μm Melinex® CORE1 (65% PCR)

100 μm Melinex® SRO (80-85% PCR)

- Manufactured with high levels of post consumer recycled material, giving another life to single use plastic waste
- Mono material solution, reducing carbon footprint and increasing recyclability
- No deterioration of product properties or durability


## Durability and Sustainability in Financial Cards

Consumers are increasingly demanding more sustainable financial cards, and Melinex® PET films offer many advantages compared to traditional materials such as PVC.

Melinex® PET has a lower carbon footprint compared to PVC and PC, and this can further be reduced with high levels of post consumer recycled rPET or with 30% bio derived content.

It is halogen free providing safer end of life options, and its durability delivers a longer life product leading to a reduction in resource usage and carbon emissions.

Melinex® PET film adds durability and longer life expectancy to financial card applications

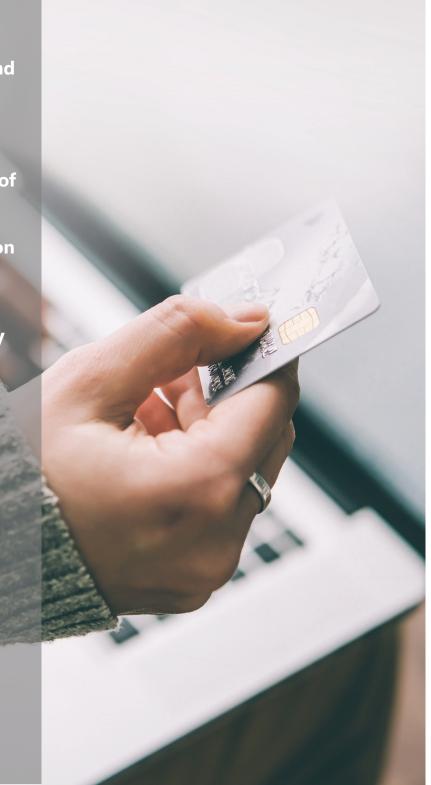

#### **Melinex® PET Films Product Range**

| Film Type                | Thickness<br>Micron<br>(gauge)  | Properties   | Typical Applications  |
|--------------------------|---------------------------------|--|---|
| Melinex® CORE 1          | 152, 307*<br>(600, 1210)        | Opaque toughened film.  1-side heat sealable, 1-side printable.  Accepts UV curable and solvent based inks using offset litho and screen printing. | Ideal for use with PVC or PETG overlays in laminated card applications.   |
| Melinex® CORE 2          | 152, 307<br>(600, 1210)         | Opaque toughened film.  2-side heat sealable.  Accepts UV curable and solvent based inks using offset litho and screen printing.                   | Ideal for use with Melinex® overlay films to produce tamper evident 100% Melinex® PET card structures.  Often used in campus cards. |
| Melinex® 342             | 75, 100, 152<br>(300, 400, 600) | Clear 2-side heat sealable.  Accepts UV curable and solvent based inks using offset litho and screen printing.                                     | For use in applications such as inlay for Driver's Licenses, picture window ID's.   |
| Melinex® LEO             | 110 (430)                       | Transparent 1-side heat sealable laser engravable film.  | Suitable as protective overlay on<br>blank or partial ink coverage.<br>Tamper evident structure when<br>used with MELINEX® CORE2.   |
| Melinex <sup>®</sup> SPO | 105* (415)                      | Transparent 1-side heat sealable, printable with dye diffusion thermal transfer colour photo personalisation.                                      | Suitable as protective overlay on<br>blank or partial ink coverage.<br>Tamper evident structure when<br>used with MELINEX® CORE2.   |
| Melinex <sup>®</sup> SRO | 100 (400)                       | Transparent 1-side heat sealable, suitable for D2T2 colour personalisation via re-transfer process.  | Suitable as protective overlay on<br>blank or partial ink coverage.<br>Tamper evident structure when<br>used with MELINEX® CORE2.   |

<sup>\*</sup> Subject to higher minimum order quantity



#### www.mylar.com europe@mylar.com / usa@mylar.com / ap@mylar.com

United Kingdom Mylar Specialty Films UK Ltd The Wilton Centre Redcar TS10 4RF

**Continental Europe** Mylar Specialty Films Luxembourg SA BP-1681 L-1016

Luxembourg

**United States** Mylar Specialty Films 3600 Discovery Drive Chester VA 23836 USA

Asia Pacific Mylar Specialty Films Room A9, 11 Floor, NCB Innovation Centre No. 888 Lai Chi Kok Road, Cheung Sha Wan, Kowloon, Hong Kong, China

This information corresponds to our current knowledge on the subject. It is offered solely to provide possible suggestions for your own experimentations. It is not intended, however, to substitute for any testing you may need to conduct to determine for yourself the suitability of our products for your particular purposes. This information may be subject to revision as new knowledge and experience becomes available. Śince we cannot anticipate all variations in actual end-use conditions, Mylar Specialty Films makes no warranties and assumes no liability in connection with any use of this information. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent right. © 2024 Mylar Specialty Films. All rights reserved, all trademarks and service marks denoted with ™ or ® are owned by Mylar Specialty Films or associated affiliates unless otherwise noted. Nothing contained herein shall be construed as a representation that any recommendations, use or resale of the product or process described herein is permitted and complies with the rules or regulations of any countries, regions, localities etc or does not infringe upon patents or other intellectual property rights of third parties. Melinex®, Mylar® and Kaladex® are registered trademarks of Mylar Specialty Films U.S. Limited Partnership